



Installation Instructions

Rhino Triview™ Installation Options


CAUTION: Use and wear the correct safety equipment. Please read and follow instructions for your safety. Always call 811 before you dig.

Rigid Marker Post Options

Retrofitting U-channel Posts

The TriView is used to convert old u-channel posts into high visibility cable route markers. Fits over all u-channel posts up to, and including, the standard 2 pound per foot post.

1. Remove existing broken or faded warning sign.
2. Straighten u-channel post, if necessary.
3. Slide TriView over the u-channel post.
4. Fasten TriView to u-channel post with the TriView Fastener or bolts.

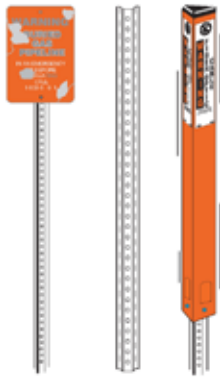


The TriView fits snugly on most 2 lb. u-channel posts. If vandalism is a concern use a cable tie to secure the TriView to the u-channel.

TriView fasteners. One hit with a hammer locks the TriView onto a 1.12 lb. u-channel post.



New Installation With U-Channel Posts

Stock # 15399

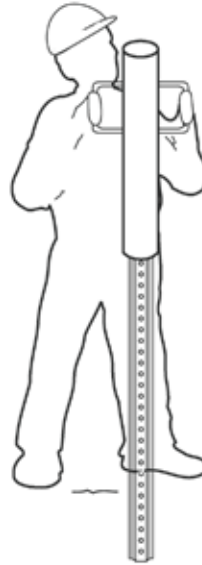

1. Drive u-channel 18"-24" into ground.
2. Slide TriView over the u-channel post.
3. Fasten TriView to u-channel post with the TriView Fastener or bolts.

TriView fasteners. One hit with a hammer locks the TriView onto a 1.12 lb. u-channel post.



Flexible Post Installation

Direct Bury


The Rhino TriView can also be buried, eliminating the need for a u-channel post.

1. Hole 18" deep.
2. Fold out TriGrip anchor barbs.
3. Insert TriView into hole so that burial depth mark is at ground level.
4. Fill in hole with dirt. Straighten as necessary frequently tamping the soil.



EZ Auger
Stock # 10859


Rhino TriGrip Anchor System locks the TriView into the ground.



TriGrip anchor barbs fold out.

Soil Anchor

Simply drive the TriView Soil Anchor into the ground with our TriView Soil Anchor Driver. The TriView slides into the anchor and locks in place.

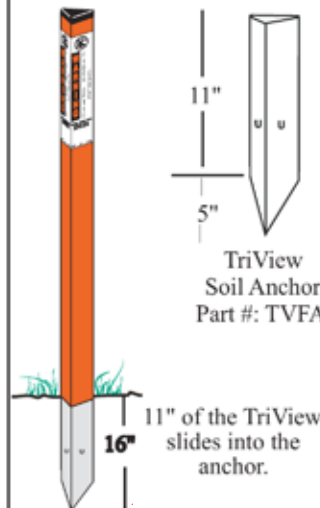

TriView Soil Anchor
Part #: TVFA



TriView™ Soil Anchor Driver
Part # TVAD-300HD-A

For hard Soil